



Owner's Manual

Thank you for purchasing Phasemation PP-Mono, MC monaural phono pick up cartridge. Please read the following instructions carefully to follow the proper use of PP-Mono before setting it up and to enjoy it for many years.

Connection

This unit is a monaural cartridge using a 2-winding coil and corresponds with a stereo playing system.

 
Magnet poles of each terminal are shown on the right.

Properly connect them in accordance with the colors of the lead wires.

When using this as a monaural system, short circuit the red (Right channel Hot) and the blue (Left channel Earth)

The left upper terminal
The right upper terminal
The left lower terminal
The right upper terminal

: Right channel Hot + (red)
: Left channel Earth - (green)
: Left channel Earth - (blue)



Installation

The mounting hole of this cartridge is a through-type and it may be pinched with the shell and the screw. The recommended length of the screw (M2.6mm, P0.45mm) is 10mm.

Cautions

- 1. This cartridge PP-Mono is a low-impedance-moving-coil type. Please use it with an MC low impedance step-up transformer or a head amplifier (MC input of PHONO) in order to connect it to a phono amplifier.
- Please do not touch the coil and the wire when you clean the stylus chip with a brush.Be sure to avoid using cleaners such as alcohol solvents or it can cause trouble such as chip skipping.
- 3. Do not apply heat to the cartridge directly such as soldering a lead wire at the output terminal. It can cause trouble such as getting the wire broken.
- 4. Use at a temperature 20 to 26°C. This cartridge will hardly perform as well as when it was designed if it is used at a temperature out of the range. Before using this cartridge, please make sure to take enough warm-up time until the room temperature fits in the range especially in winter.
- 5. When you clean this cartridge, please use dry clean cloth. Be sure to avoid using a cleaner such as alcohol and thinner solvents.
- 6. The attached wrench and screw are made from steel. Be careful not to let it break or adhere to the magnetic circuits when assembling.

Specifications

1. Electric GenerationMoving Coil2. Impedance4 ohm3. Appropriate Needle Pressure1.7 to 2.0 g

4. Output Voltage 0.38 mV or more(horizontally 1kHz 50 mm/s)

 5. Freq. Range at Play
 10 Hz to 30 kHz

 6. Compliance
 8.0x(e-6)cm/dyne (100Hz)

 7. Channel Balance
 Within 1dB (1kHz)

8. Applicable Temp. Range 20 to 26°C
9. Self weight 14.7g
10. Stylus Chip Diamond (Ro

0. Stylus Chip Diamond (Round Pin/bending rate 1.0mil)

11. Cantilever Aluminum Pipe
12. Magnet Samalium-cobalt Magnet

13. Magnetic Circuit Components Material Purmendur

14. Material of Base/Body Stainless carved material (with DLC treatment)

/Duralumin carved material (with DLC treatment)


15. Dimensions

See the figure

16. Accessories

Hex wrench, Screw(M2.6x10) x2, Washer x2, Nut x2

■ Dimensions and specifications might be changed without notice for the improvement of products.

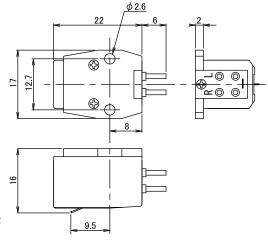

Dimensions figure(mm)

● Needle exchange

Please contact the dealer when exchanging the needle.

Phasemation

Kyodo Denshi Engineering Co., Ltd.
8-40-17 Shinyoshidahigashi, Kohoku-ku, Yokohama, Kanagawa, 223-0058 Japan
TEL 81-45-710-0975
FAX 81-45-710-0976
URL http://phasemation.com